


## INFORMATION SHEET


**PRODUCT TYPE:** AIR WEDGE

**PRODUCTS #'S:** DT9

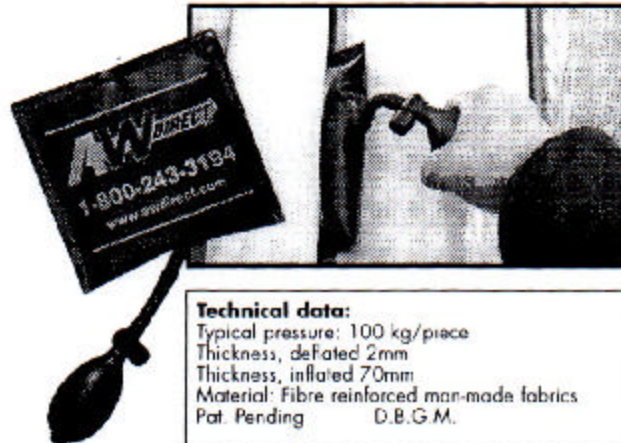

**Technical data:**

Typical pressure: 100 kg/piece  
 Thickness, deflated 2mm  
 Thickness, inflated 70mm  
 Material: Fibre reinforced man-made fabrics  
 Pat. Pending D.B.G.M.

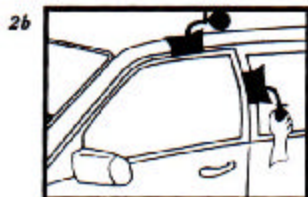

**For fast and careful opening of car doors when the key is missing**

- 1a. Place one or two Air Wedges between the car window and the rubber beading. Push down the wedge on both sides.
- 1b. Using the hand pump, inflate the Air Wedge to create a small gap between the window and door. The Wedge keeps the pressure and preserves the gap. Then use traditional tools for opening doors. Remove after deflating.
- 2a. Place one or two Air Wedges in between the car door and frame. The wedges will slide in easier if they have been sprayed with silicone before use.
- 2b. The Wedges can now be carefully inflated until a large enough gap has been created for the door opening tools needed. Secure the gap with solid wedges. Remember to remove any tools or objects before deflating the Air Wedges

ORDER ONLINE [www.awdirect.com](http://www.awdirect.com)  
 CALL TOLL FREE 1-800-243-3194 FAX TOLL FREE 1-800-828-9678

83 WHITE OAK DRIVE • BERLIN, CT 06037

**AW DIRECT**